

Verosol Roller Blinds

Use, Care and Maintenance

Verosol Roller Blinds are a popular style, being both contemporary in appearance and functional in nature. Whether you have the Mode or Ambience system remember the following:

- Always raise the blinds if windows and/or doors are open, as a strong breeze could catch and damage the blind.
- Avoid exposure to wind or rain, as rain blown onto the blind might stain the fabrics and these spots could be difficult to remove.

Operating Roller Blinds

- To raise the blinds, stand directly in front of the chain, making sure the chain does not rub against the chain wheel mechanism, you will be able to hear and feel the difference.
- If you notice your fabric is tracking or telescoping, please contact your Verosol Retailer as soon as possible.

Cleaning Roller Blinds

Choosing the best method of cleaning will depend on the fabric of your blinds.

- Dust with a soft brush or gently sponge clean with warm soapy water, leaving the blinds down to dry.
- Fabrics such as Ultra, Mirage and Satin may be spot cleaned. But be careful not to crease the fabric.
- Spot clean any marks with a soft damp cloth, make sure the cloth damp not wet to guard against leaving water marks.
- You will also find an art gum eraser will also remove a wide range of service marks.

Verosol Metallised fabrics are anti-static, meaning the product resists air-borne dust.

- If dusting is required, use a soft brush or dusting cloth.
- Dirt marks or spills on metallised fabric must be cleaned ultrasonically. Think of this process the same as taking your silks to the dry cleaners.
- If the fabric in your blinds have a metallised backing, **DO NOT** spray window cleaner on or near the fabric.

Please contact your Verosol Retailer if you have any further questions or concerns about your Verosol Blinds.

Roller Blinds

Pleated Blinds

Roman Blinds

Panel Blinds

Timber Shutters
& Blinds

Curtains

Venetian Blinds

Motorised Blinds

Verosol